

Notebook Tour

User Guide

© Copyright 2006 Hewlett-Packard
Development Company, L.P.

Microsoft and Windows are U.S. registered
trademarks of Microsoft Corporation.
Bluetooth is a trademark owned by its
proprietor and used by Hewlett-Packard
Company under license. SD Logo is a
trademark of its proprietor.

The information contained herein is subject
to change without notice. The only
warranties for HP products and services are
set forth in the express warranty statements
accompanying such products and services.
Nothing herein should be construed as
constituting an additional warranty. HP shall
not be liable for technical or editorial errors
or omissions contained herein.

First Edition: September 2006

Document Part Number: 430102-001

Table of contents

Components

Top components	2
TouchPad	2
Lights	3
Buttons and speakers	6
Keys	9
Hotkey quick reference	9
Front components	11
Rear components	12
Right-side components	13
Left-side components	14
Bottom components	15
Display components	16
Wireless antennae (select models only)	17
Additional hardware components	18
Labels	19
Index	20

Components

This chapter explains the hardware features of the computer.

To see a list of hardware installed in the computer, follow these steps:

1. Select **Start > My Computer**.
2. In the left pane, under **System Tasks**, click **View system information**.
3. Select **Hardware** tab > **Device Manager**.


You can also add hardware or modify device configurations using Device Manager.



NOTE Components included with the computer may vary by region and by model. The illustrations in this chapter identify the standard features included in most computer models.

Top components

TouchPad

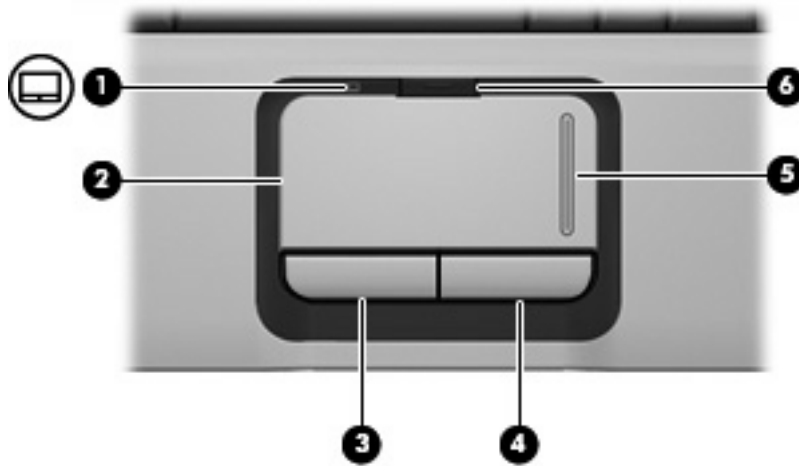

Component	Description
(1) TouchPad light	Blue: TouchPad is enabled. Amber: TouchPad is disabled.
(2) TouchPad*	Moves the pointer and selects or activates items on the screen.
(3) Left TouchPad button*	Functions like the left button on an external mouse.
(4) Right TouchPad button*	Functions like the right button on an external mouse.
(5) TouchPad scroll zone*	Scrolls up or down.
(6) TouchPad on/off button	Enables/disables the TouchPad.

*This table describes factory settings. To view and change pointing device preferences, select **Start > Control Panel > Printers and Other Hardware > Mouse**.

Lights



NOTE Refer to the illustration that most closely matches your computer.



Component	Description
(1) Power lights (2)*	<p>On: The computer is on.</p> <p>Blinking: The computer is in standby.</p> <p>Off: The computer is off or in hibernation.</p>
(2) Battery light	<p>On: A battery is charging.</p> <p>Blinking: A battery that is the only available power source has reached a low-battery condition. When the battery reaches a <i>critical</i> low-battery condition, the battery light begins blinking rapidly.</p> <p>Off: If the computer is plugged into an external power source, the light turns off when all batteries in the computer are fully charged. If the computer is not plugged into an external power source, the light stays off until the battery reaches a low-battery condition.</p>
(3) Drive light	Blinking: The hard drive or optical drive is being accessed.
(4) Caps lock light	On: Caps lock is on.
(5) Media button light	Blinks once when the media button is pressed.
(6) DVD button light	Blinks once when the DVD button is pressed.
(7) Previous/rewind light	Blinks once when the previous/rewind button is pressed.
(8) Play/pause light	Blinks once when the play/pause button is pressed.
(9) Next/fast forward light	Blinks once when the next/fast forward button is pressed.
(10) Stop light	Blinks once when the stop button is pressed.
(11) Volume mute light	<p>Blue: Computer sound is turned on.</p> <p>Amber: Computer sound is turned off.</p>
(12) Volume down light	Blinking: The volume scroll zone is being used to decrease speaker volume.

Component	Description
(13) Volume up light	Blinking: The volume scroll zone is being used to increase speaker volume.
(14) Num lock light	On: Num lock is on or the embedded numeric keypad is enabled.

*The 2 power lights display the same information. The light on the power button is visible only when the computer is open. The power light on the front of the computer is visible whether the computer is open or closed.



Component	Description
(1) Power lights (2)*	On: The computer is on. Blinking: The computer is in standby. Off: The computer is off or in hibernation.
(2) Battery light	On: A battery is charging. Blinking: A battery that is the only available power source has reached a low-battery condition or a <i>critical</i> low-battery condition. Off: If the computer is plugged into an external power source, the light turns off when all batteries in the computer are fully charged. If the computer is not plugged into an external power source, the light stays off until the battery reaches a low-battery condition.
(3) Drive light	Blinking: The hard drive or optical drive is being accessed.
(4) Caps lock light	On: Caps lock is on.
(5) Media button light	Blinks once when the media button is pressed.
(6) Volume mute light	Blue: Computer sound is turned on. Amber: Computer sound is turned off.
(7) Volume down light	Blinking: The volume scroll zone is being used to decrease speaker sound.
(8) Volume up light	Blinking: The volume scroll zone is being used to increase speaker sound.


Component	Description
(9) Num lock light	Blinking: Num lock is on or the embedded numeric keypad is enabled.

*The 2 power lights display the same information. The light on the power button is visible only when the computer is open. The power light on the front of the computer is visible whether the computer is open or closed.



Buttons and speakers

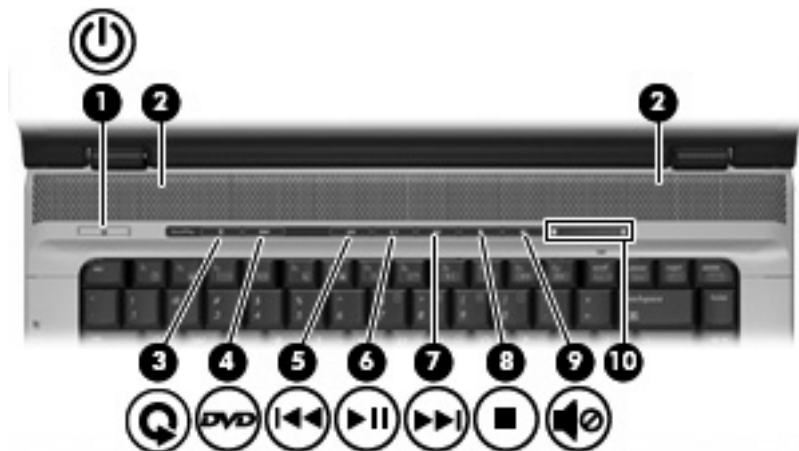


NOTE Refer to the illustration that most closely matches your computer.




Component	Description
<p>(1) Power button*</p>	<ul style="list-style-type: none"> When the computer is off, press the button to turn on the computer. When the computer is on, press the button to initiate hibernation. When the computer is in standby, press the button briefly to exit standby. When the computer is in hibernation, press the button briefly to exit hibernation. <p>If the computer has stopped responding and Microsoft® Windows® shutdown procedures cannot be used, press and hold the power button for at least 5 seconds to turn off the computer.</p>
<p>(2) Speakers (2)</p>	<p>Produce sound.</p>
<p>(3) Media button</p>	<p>Opens the music or media software. Can be used with or without QuickPlay.</p> <ul style="list-style-type: none"> When QuickPlay is installed and the computer is on, press the button to open the music program or the Media menu. When QuickPlay is installed and the computer is off, press the button to open the music program or the Media menu. When QuickPlay is installed and the computer is in standby, press the button to resume from standby. When QuickPlay is not installed and the computer is on, press the button to open the music program or the Media menu. When QuickPlay is not installed and the computer is off, the button does not function. When QuickPlay is not installed and the computer is in standby, press the button to resume from Standby.

Component	Description
(4) DVD button	<p data-bbox="839 226 895 285"> NOTE The media button does not affect the procedure for restoring from hibernation.</p> <p data-bbox="839 323 1082 348">Opens the DVD software.</p> <ul data-bbox="839 373 1465 632" style="list-style-type: none"> <li data-bbox="839 373 1465 426">• When the computer is on, press the button to open the default DVD program and start a DVD in the optical drive. <li data-bbox="839 451 1465 527">• When the computer is off, press the button to open QuickPlay and start a DVD in the optical drive. If the QuickPlay software is not installed, the DVD button does not function. <li data-bbox="839 552 1465 632">• When the computer is in standby, press the button to open QuickPlay and start a DVD in the optical drive. If the QuickPlay software is not installed, the computer resumes from standby.
(5) Previous/rewind button	<p data-bbox="839 657 895 716"> NOTE Refer to the QuickPlay online Help for information on using QuickPlay.</p> <ul data-bbox="839 753 1465 884" style="list-style-type: none"> <li data-bbox="839 753 1465 806">• Plays the previous track or chapter when the button is pressed once. <li data-bbox="839 831 1465 884">• Rewinds the disc when the button is pressed simultaneously with the fn key.
(6) Play/pause button	Plays or pauses the disc.
(7) Next/fast forward button	<ul data-bbox="839 959 1465 1058" style="list-style-type: none"> <li data-bbox="839 959 1182 984">• Plays the next track or chapter. <li data-bbox="839 1010 1465 1058">• Fast forwards the disc when pressed simultaneously with the fn key.
(8) Stop button	Stops the disc.
(9) Volume mute button	Mutes and restores speaker sound.
(10) Volume scroll zone	Adjusts speaker volume. Slide your finger to the left to decrease volume and to the right to increase volume. You can also tap the minus sign on the scroll zone to decrease volume, or tap the plus sign on the scroll zone to increase volume.

*This table describes factory settings. For information about changing factory settings, refer to the user guides located in the Help and Support Center.

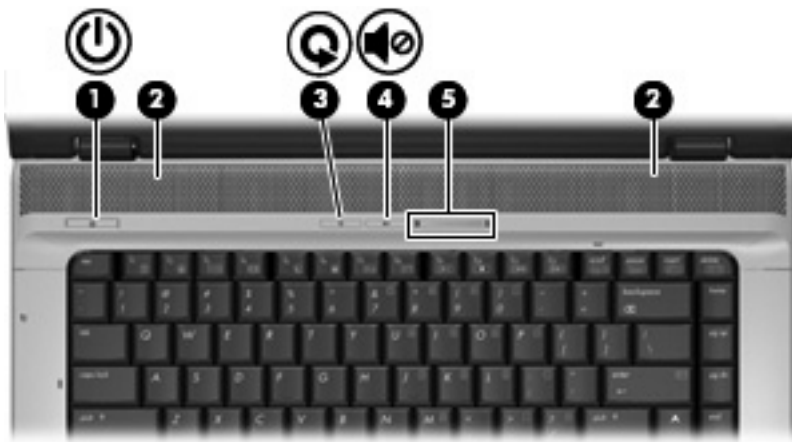


Component	Description
(1) Power button*	<ul style="list-style-type: none"> • When the computer is off, press the button to turn on the computer. • When the computer is on, press the button to initiate hibernation. • When the computer is in standby, press the button briefly to exit standby. • When the computer is in hibernation, press the button briefly to exit hibernation. <p>If the computer has stopped responding and Microsoft Windows shutdown procedures cannot be used, press and hold the power button for at least 5 seconds to turn off the computer.</p>
(2) Speakers (2)	Produce sound.
(3) Media button	<p>Opens the music or media software. Can be used with or without QuickPlay.</p> <ul style="list-style-type: none"> • When QuickPlay is installed and the computer is on, press the button to open the music program or the Media menu. • When QuickPlay is installed and the computer is off, press the button to open the music program or the Media menu. • When QuickPlay is installed and the computer is in standby, press the button to resume from standby. • When QuickPlay is not installed and the computer is on, press the button to open the music program or the Media menu. • When QuickPlay is not installed and the computer is off, the button does not function. • When QuickPlay is not installed and the computer is in standby, press the button to resume from Standby.
	<p>NOTE The media button does not affect the procedure for restoring from hibernation.</p>
	(4) Volume mute button
(5) Volume scroll zone	Adjusts speaker volume. Slide your finger to the left to decrease volume and to the right to increase volume. You can also tap the minus sign on the scroll zone to decrease volume, or tap the plus sign on the scroll zone to increase volume.
<p>*This table describes factory settings. For information about changing factory settings, refer to the user guides located in the Help and Support Center.</p>	

Keys



NOTE Your computer may look slightly different from the illustration in this section.

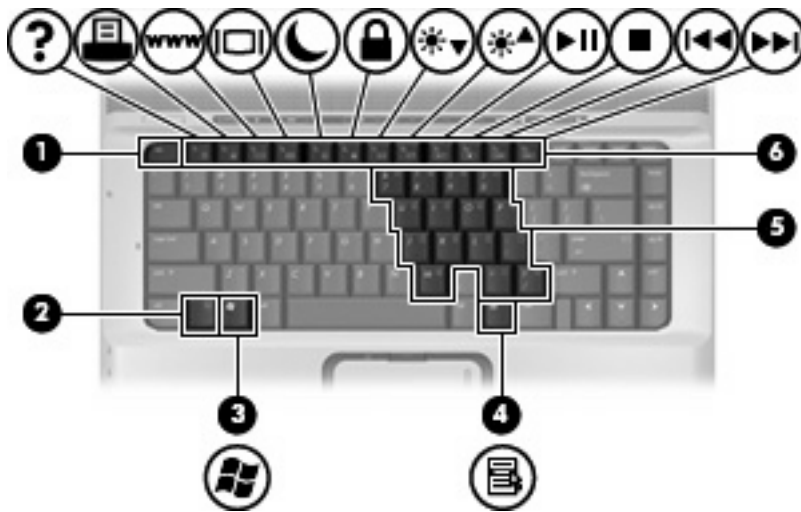

Component	Description
(1) esc key	Displays system information when pressed in combination with the fn key.
(2) fn key	Executes frequently used system functions when pressed in combination with a function key or the esc key.
(3) Windows logo key	Displays the Microsoft Windows Start menu.
(4) Windows applications key	Displays a shortcut menu for items beneath the pointer.
(5) Embedded numeric keypad keys	Can be used like the keys on an external numeric keypad.
(6) Function keys	Execute frequently used system functions when pressed in combination with the fn key.

Hotkey quick reference

Function	Hotkey
Display system information.	fn+esc
Clear system information.	fn+esc or press enter
Open the Help and Support Center.	fn+f1
Open the Print Options window.	fn+f2
Open a Web browser.	fn+f3
Alternate between computer display and external display.	fn+f4
Initiate standby.	fn+f5
Initiate QuickLock.	fn+f6
Decrease screen brightness.	fn+f7


Function	Hotkey
Increase screen brightness.	fn+f8
Play, pause, or resume an audio CD or a DVD.	fn+f9
Stop an audio CD or a DVD.	fn+f10
Play the previous track or chapter on an audio CD or a DVD.	fn+f11
Play the next track or chapter on an audio CD or a DVD.	fn+f12

Front components





NOTE Your computer may look slightly different from the illustration in this section.




Component	Description
(1) Wireless switch	Turns the wireless feature on or off, but does not create a wireless connection.  NOTE A wireless network must be set up in order to establish a wireless connection.
(2) Wireless light	Blue: An integrated wireless device, such as a wireless local area network (LAN) device and/or a Bluetooth® device, is turned on. Amber: All wireless devices are turned off.
(3) Consumer infrared lens	Receives a signal from the HP Remote Control.
(4) Audio-in (microphone) jack	Connects an optional computer headset microphone, stereo array microphone, or monaural microphone.
(5) Audio-out (headphone) jack	Produce sound when connected to optional powered stereo speakers, headphones, ear buds, a headset, or television audio.
(6) Audio-out (headphone) S/PDIF jack (select models only)	Provides enhanced audio performance, including surround sound and other high-end audio output.

Rear components




Component	Description
Vent	<p data-bbox="815 457 1236 485">Enables airflow to cool internal components.</p> <p data-bbox="815 512 1437 653"> CAUTION To prevent overheating, do not obstruct vents. Use the computer only on a hard, flat surface. Do not allow another hard surface, such as an adjoining optional printer, or a soft surface, such as pillows or thick rugs or clothing, to block airflow.</p> <p data-bbox="815 688 1437 804"> NOTE The computer fan starts up automatically to cool internal components and prevent overheating. It is normal for the internal fan to cycle on and off during routine operation.</p>

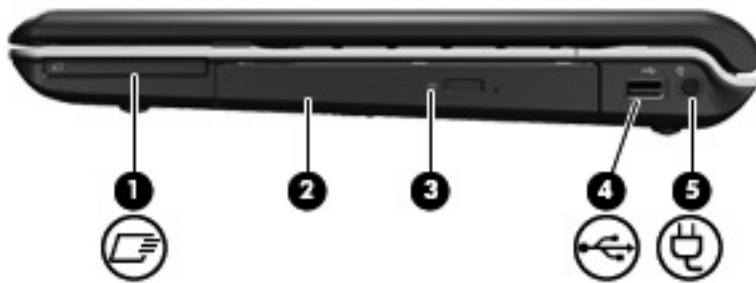


Right-side components




Component	Description
(1) ExpressCard slot	Supports optional ExpressCard/54 cards.
(2) Optical drive	Reads an optical disc.
(3) Optical drive light	Blinking: The optical drive is being accessed.
(4) USB port	Connect an optional USB device.
(5) Power connector	Connects an AC adapter.

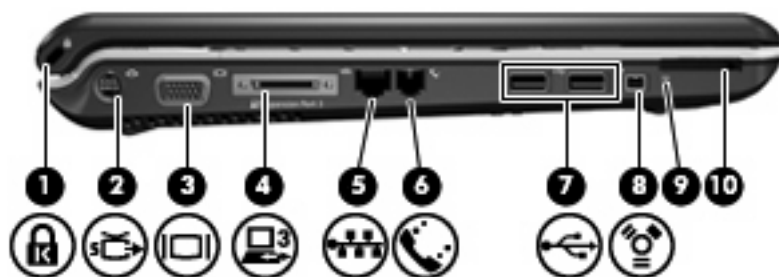Left-side components



Component	Description
(1) Security cable slot	Attaches an optional security cable to the computer.  NOTE The security cable is designed to act as a deterrent, but may not prevent the computer from being mishandled or stolen.
(2) S-Video-out jack	Connects an optional S-Video device such as a television, VCR, camcorder, overhead projector, or video capture card.
(3) External monitor port	Connects an external VGA monitor or projector.
(4) Expansion port 3	Connects the computer to an optional expansion product or docking device.  NOTE The computer has only one expansion port. The term <i>expansion port 3</i> describes the type of expansion port.
(5) RJ-45 (network) jack	Connects a network cable.  NOTE On select computer models, the network jack provides Gigabit Ethernet functionality.
(6) RJ-11 (modem) jack	Connects a modem cable.
(7) USB port (1 or 2, depending on computer model)	Connect optional USB devices.
(8) 1394 port (select models only)	Connects an optional IEEE 1394 or 1394a device, such as a camcorder.
(9) Digital Media Slot light (select models only)	On: A digital card is being accessed.
(10) Digital Media Slot (select models only)	Supports the following optional digital card formats: Secure Digital (SD) Memory Card, MultiMediaCard (MMC), Secure Digital Input/Output (SD I/O), Memory Stick (MS), Memory Stick Pro (MSP), xD-Picture Card (XD), xD-Picture Card (XD) Type M.


Bottom components

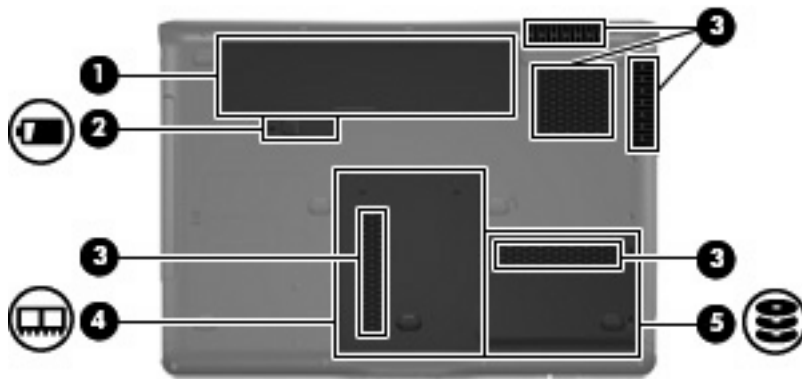

Component	Description
(1) Battery bay	Holds the battery.
(2) Battery release latch	Releases the battery from the battery bay.
(3) Vents (5)	Enable airflow to cool internal components.
	<p>CAUTION To prevent overheating, do not obstruct vents. Use the computer only on a hard, flat surface. Do not allow another hard surface, such as an adjoining optional printer, or a soft surface, such as pillows or thick rugs or clothing, to block airflow.</p> <p>NOTE The computer fan starts up automatically to cool internal components and prevent overheating. It is normal for the internal fan to cycle on and off during routine operation.</p>
(4) Memory module compartment	Contains the memory module slots.
(5) Hard drive bay	Holds the hard drive.

Display components



Component	Description
(1) Internal display switch*	Turns off the display and initiates standby if the display is closed while the power is on.
(2) Internal microphones (2) (select models only)	Record sound. <div data-bbox="815 968 868 1024" style="display: inline-block; vertical-align: middle;">  </div> NOTE A microphone icon next to each microphone opening indicates that the computer has internal microphones.
(3) Integrated camera light (select models only)	On: The integrated camera is in use.
(4) Integrated camera (select models only)	Records video and captures still photos.

*Depending on your computer model, the internal display switch on the computer may vary in location.

Wireless antennae (select models only)

On select computer models, at least 2 antennae send and receive signals from one or more wireless devices. These antennae are not visible from the outside of the computer.

To see wireless regulatory notices, refer to your region's section of the *Regulatory, Safety and Environmental Notices* located in the Help and Support Center.



NOTE For optimal transmission, keep the areas immediately around the antennae free from obstructions.

Additional hardware components



Component	Description
(1) Power cord*	Connects an AC adapter to an AC outlet.
(2) AC adapter	Converts AC power to DC power.
(3) Battery*	Powers the computer when the computer is not plugged into external power.
(4) Modem cable* (select models only)	Connects the internal modem to an RJ-11 telephone jack or to a country-specific modem adapter.
(5) Country-specific modem cable adapter (select models only)	Adapts the modem cable to a non-RJ-11 telephone jack.

*Modem cables, batteries, and power cords vary in appearance by region and country.

Labels

The labels affixed to the computer provide information you may need when you troubleshoot system problems or travel internationally with the computer.

- Service tag—Provides the product brand and series name, serial number (s/n), and product number (p/n) of your computer. Have this information available when you contact Customer Care. The service tag label is affixed to the bottom of the computer.
- Microsoft Certificate of Authenticity—Contains the Microsoft® Windows® Product Key. You may need the Product Key to update or troubleshoot the operating system. This certificate is affixed to the bottom of the computer.
- Regulatory label—Provides regulatory information about the computer. The regulatory label is affixed to the bottom of the computer.
- Modem approval label—Provides regulatory information about the modem and lists the agency approval markings required by some of the countries in which the modem has been approved for use. You may need this information when traveling internationally. The modem approval label is affixed inside the hard drive bay.
- Wireless certification label(s) (select models only)—Provide information about optional wireless devices and the approval markings of some of the countries in which the devices have been approved for use. An optional device may be a wireless local area network (WLAN) device or an optional Bluetooth® device. If your computer model includes one or more wireless devices, one or more certification labels are included with your computer. You may need this information when traveling internationally. Wireless certification labels are affixed inside the memory module compartment.

Index

Symbols/Numerics

1394 port, identifying 14

A

AC adapter, identifying 18

antennae 17

applications key, Windows 9

audio-in (microphone) jack,
identifying 11

audio-out (headphone) jack,
identifying 11

B

battery bay 15, 19

battery light, identifying 3, 4

battery release latch,
identifying 15

battery, identifying 18

bays

 battery 15, 19

 hard drive 15

Bluetooth label 19

buttons

 DVD 7

 media 6, 8

 next/fast forward 7

 play/pause 7

 power 6, 8

 previous/rewind 7

 stop 7

 TouchPad 2

 TouchPad on/off 2

 volume mute 7, 8

C

cable, RJ-11 (modem) 18

camera, identifying 16

caps lock light, identifying 3, 4

Certificate of Authenticity label 19

compartment

 memory module 15

components

 additional hardware 18

 bottom 15

 display 16

 front 11

 left-side 14

 rear 12

 right-side 13

 top 2

connector, power 13

consumer infrared lens,
identifying 11

cord, power 18

D

Digital Media Slot light,
identifying 14

Digital Media Slot, identifying 14

display switch, identifying 16

drive light, identifying 3, 4

DVD button light, identifying 3

DVD button, identifying 7

E

esc key, identifying 9

expansion port, identifying 14

ExpressCard slot, identifying 13

external monitor port,
identifying 14

F

fn key, identifying 9

function keys, identifying 9

H

hard drive bay, identifying 15

headphone (audio-out) jack 11

hotkeys, quick reference 9

I

IEEE 1394 port, identifying 14

infrared lens, identifying 11

integrated camera light,
identifying 16

integrated camera, identifying 16

internal display switch,
identifying 16

internal microphones,
identifying 16

J

jacks

 audio-in (microphone) 11

 audio-out (headphone) 11

 RJ-11 (modem) 14

 RJ-45 (network) 14

 S-Video-out 14

K

keypad keys, identifying 9

keys

 esc 9

 fn 9

 function 9

 keypad 9

 Windows applications 9

 Windows logo 9

L

labels

 Bluetooth 19

 Microsoft Certificate of
 Authenticity 19

 modem approval 19

 regulatory 19

 service tag 19

 wireless certification 19

 WLAN 19

latch, battery release 15

lights

- battery 3, 4
- caps lock 3, 4
- Digital Media Slot 14
- drive 3, 4
- DVD button 3
- integrated camera 16
- media button 3, 4
- mute 3, 4
- next/fast forward 3
- num lock 4, 5
- optical drive 13
- play/pause 3
- power 3, 4
- previous/rewind 3
- stop 3
- TouchPad 2
- volume down 3, 4
- volume mute 3, 4
- volume up 4
- wireless 11

M

- media activity buttons, identifying 7
- media activity lights, identifying 3
- media button light, identifying 3, 4
- media button, identifying 6, 8
- memory module compartment, identifying 15
- microphone (audio-in) jack 11
- Microsoft Certificate of Authenticity label 19
- modem approval label 19
- modem cable adapter, identifying 18
- monitor port, external 14
- mute button, identifying 7, 8
- mute light, identifying 3, 4

N

- next/fast forward button, identifying 7
- next/fast forward light, identifying 3
- num lock light, identifying 4, 5

O

- operating system
 - Microsoft Certificate of Authenticity label 19
 - Product Key 19
- optical drive light, identifying 13
- optical drive, identifying 13

P

- play/pause button, identifying 7
- play/pause light, identifying 3
- ports
 - 1394 14
 - expansion 14
 - external monitor 14
 - USB 13, 14
- power button, identifying 6, 8
- power connector, identifying 13
- power cord, identifying 18
- power lights, identifying 3, 4
- previous/rewind button, identifying 7
- previous/rewind light, identifying 3
- Product Key 19
- product name and number, computer 19

R

- regulatory information
 - modem approval label 19
 - regulatory label 19
 - wireless certification labels 19
- release latch, battery 15
- RJ-11 (modem) cable, identifying 18
- RJ-11 (modem) jack, identifying 14
- RJ-45 (network) jack, identifying 14

S

- S-Video-out jack, identifying 14
- scrolling regions, TouchPad 2
- security cable slot, identifying 14
- serial number, computer 19
- service tag 19
- slots
 - Digital Media 14
 - ExpressCard 13

- memory module 15
- security cable 14
- speakers, identifying 6, 8
- stop button, identifying 7
- stop light, identifying 3

T

- TouchPad
 - buttons 2
 - identifying 2
 - scrolling regions 2
- TouchPad light, identifying 2
- TouchPad on/off button 2
- traveling with the computer
 - modem approval label 19
 - wireless certification labels 19

U

- USB ports, identifying 13, 14

V

- vents, identifying 12, 15
- volume down light, identifying 3, 4
- volume mute button, identifying 7, 8
- volume mute light, identifying 3, 4
- volume scroll zone, identifying 7, 8
- volume up light, identifying 4

W

- Windows applications key, identifying 9
- Windows logo key, identifying 9
- wireless antennae 17
- wireless certification label 19
- wireless light, identifying 11
- wireless switch, identifying 11
- WLAN device 19
- WLAN label 19

